

Detailed Feature List

Administration Features

Partition

Create Partition
Choose CODEC
Extension length
Partition No.

Phones

Add, Delete, Modify
IP Phones
Analog Phones
MWI support

COS

Create Class of services
Modify/delete COS

Users

Add users
Set RNAs & Forwarding
Allot Mail box size
Allot Extension
Web Access
Lock-Unlock Mail boxes
Set for Auto-attendant
Set no. of rings
Add Hunt groups
Add Voice Mail Groups
Create Phantom users
Add an application

Partition Services

Define Administrators
Create Attendants
Define partition operator
Shortcut keys
Voice Main settings
Message Settings
Login Warning

Gateways

Register gateway
Modify Gateway
Define Mobility

Dial Planner

Add a dial plan

Define call route

Block Numbers

Line Group

Add a Line Group
Delete a Line Group

DID

Configure a DID
Modify DID
Add or delete DID

Call Records

View records by user
View records by dates
Export into MS-Excel

Conference

Add Conference
Listing conference

Logout

Logout from the system

User defined Features

User Name

Displays user name

View and Add Profiles

Create upto four profiles
Set Call forwarding
Rings between Tries
Choose icons

Select a Phone

Choose a phone

Personal Information and Speed

Dials

Personal Speed Dial options
Website login Password
Voice Mail access code

Conference

Schedule conference

Logout

Logout from the system

Select a Phone

Choose a phone

View and Add Profiles

Create four profiles
Set Call forwarding
Rings between Tries
Choose icons

Personal Information and Speed Dials

Personal Speed Dial options
Website login Password
Voice Mail access code

Conference


Schedule conference

Logout


Logout from the system

User Name

Displays user name

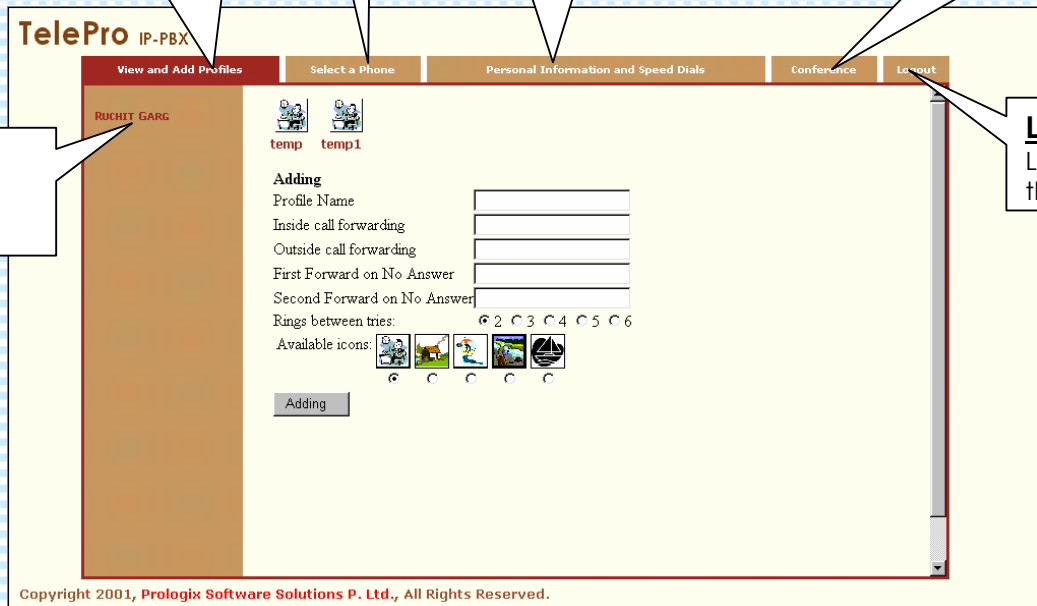

TelePro™ IP-PBX User Feature Tree

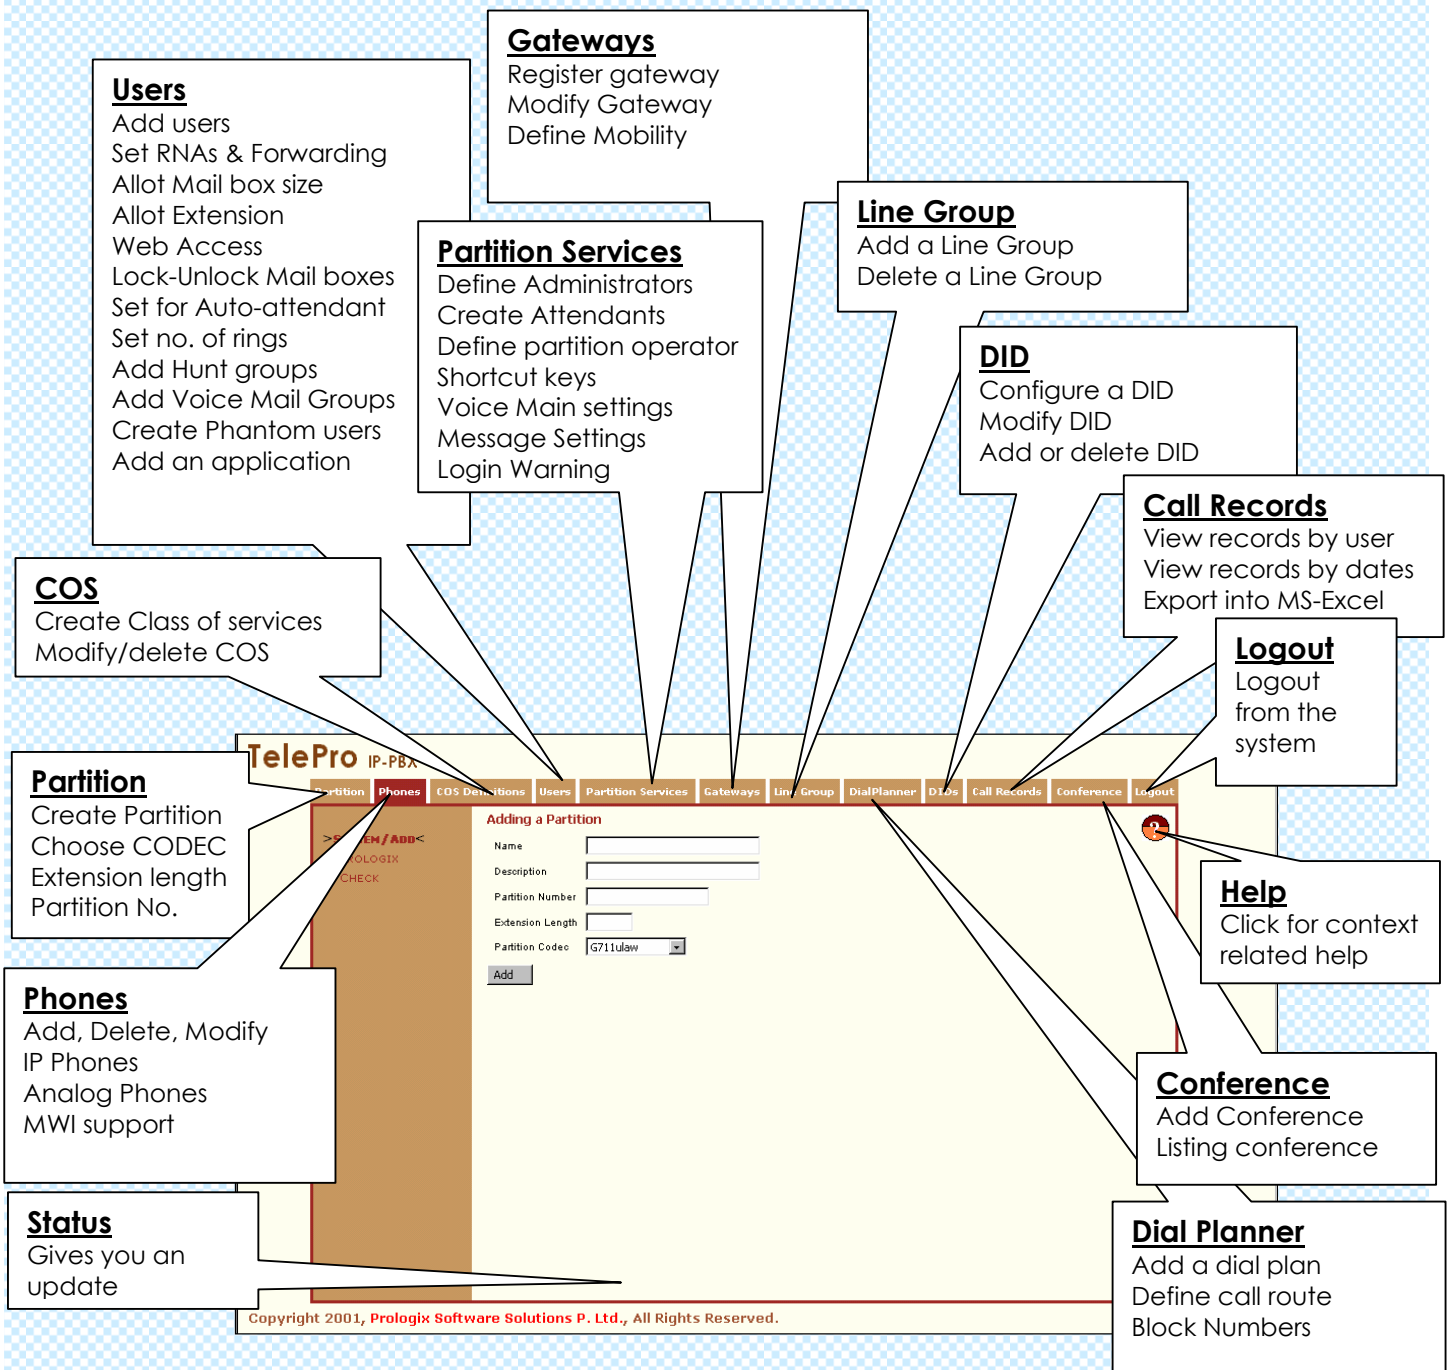

TelePro™ IP-PBX Administrator Feature Tree